## **OSD Menu Functions, HD/HDMI Series Models**



DOIOM

	Source Select a video input signal
R	Main Port Change → (Choose:)
	HD/SD SDI 1 **
	HD/SD/SD/2 HDMI *
	Composite 1
	Composite 2 *** S-Video 1 ***
Source Menu	Component 1 ***
	PIP Port Change *** ► PIP Off / Composite 1 / S-Video 1***/ Component 1***/ DVI / HDMI* / HD-SD SDI 1** / HD-SD SDI 2**
	PiP Setun
	PiP Size : Off / PiP Size/ 1~18 / Size by Size / Size by Size Tall
	The PiP display capability depends on choice of input sources refer to PiP mix table
	PiP Position :
	Move the PiP position upward
	Move the PiP position downward
	4P
	Move the PiP position to the left
	Move the PiP position to the right
	PiP Blend Level : 6.25% ~ 100% PiP Swap : Swap between the main window and PIP window
	PiP Auto Turn off : OFF / ON ON : When no PiP source signal is input after 30 seconds, the PiP window will turn off automatically
	OFF : PiP window keeps on (with inserted blue screen) *** DISPLAYS WHEN ENABLED UNDER SETUP → AUTO SOURCE SEEK (IF FEATURED) + HDMI NOT INCLUDED ON SDI MODELS, USE:
<b>/</b>	FOR HDMI, CONNECT HDMI TO DVI CONNECTOR WITH ADAPTOR PLUG (HDCP SUPPORTED)
	Utilities Setup b
	Auto Picture Setup <sup>#</sup> : Auto adjust the image position, phase and size
	Auto Color Gain <sup>#</sup> : Auto Color Calibration (75% Color Bars or 3/4 white-1/4 black in VGA)
	- Off (4:3)
	- 1280x768 VESA VGA standards do not support an identification
	- 1366x768
<b>Utilities Menu</b>	
	Manual Clock": Adjust the image horizontal size
	Manual Phase" : Fine tune the data sampling position (adjust image quality)
	Auto Source Seek :
	- Auto : <sup>222</sup> - OFF / ON ON – Auto Source Seek always enabled (look for sync on Setup chosen inputs below)
	OFF – Disable auto source select function
	- Setup > Select to display on Menu and to Auto Seek (detect) these input sources
	HD/SD SDI 1 4 9FF 0N

Specifications subject to change without notice



Specifications subject to change without notice

<b>Freeze</b> Freeze the current image on screen (use > and < buttons to freeze and unfreeze)
Zoom Level - Community the displayed image Use ">" button to increase the image size Use "<" button to decrease the zoomed image size
Horizontal Pan       -       +       Pan (move) through the image horizontally         Vertical Pan       -       +       Pan the image viewing window vertically         Factory Reset       Clear the Zoom settings made above         Note : Freeze state will be cleared when you use the zoom function.
Color Temperature >
5000K Red Gain : + Green Gain : + Blue Gain : + Red Offset : +
Green Offset : Blue Offset : Reset to Defaults : Restore to nominal preset values (this table only)
Red Gain : Green Gain : Blue Gain : Red Offset : Green Offset : Blue Offset : Blue Offset : Reset to Defaults : Restore to nominal preset values (this table only)
8000K Red Gain : Green Gain : Blue Gain : Red Offset : Green Offset : Blue Offset : Reset to Defaults : Restore to nominal preset values (this table only)
9300K Red Gain : Green Gain : Blue Gain : Red Offset : Green Offset : Blue Offset : Reset to Defaults : Restore to nominal preset values (this table only)
User Setting Red Gain : Green Gain : Blue Gain : Red Offset : Green Offset : Blue Offset : Reset to Defaults : Restore to nominal preset values (this table only)
<ul> <li>Reset All to Defaults : Restore all Color Temperature settings to the default values (all tables).</li> <li>Hot Keys          <ul> <li>(HK1: Choose the short-cut function of the &lt;&gt; arrow keys [if Menu not displayed])</li> <li>HotKey1: Volume / Brightness / Contrast / Inputs / Aspect Ratio/ Zoom / Freeze / PIP Size / PIP Swap / Saturation / Hue / Backlight / Auto Picture Setup / No Function (disabled)</li> </ul> </li> </ul>

Specifications subject to change without notice

