

Using a Multi-Homing Workstation Monitor Connection

18 Dec 15 mb

For PCs with a dual NIC (two network connections), deactivate the office network and activate the second network (monitor):

1. To check the status of the active NIC(s) on the workstation, run:
Find-IP_Info.bat (enclosed)
2. Workstation:
 - a. Close all Programs
 - b. Open: Settings, Network Connections, right click on Local Area Connection, and choose Disable.
 - c. Right click on Local Area Connection 2, choose Enable.
3. Set the comm parameters for LA2 to match you monitor
4. Run either IP Finder, to check the connection to your monitor, or BSC-100 for control or firmware updates.

