

# 4kc models Factory Menu

1. Color Control
2. Reset
3. Download
4. Information

## Factory mode menu entry


>Front key: "Menu" + "Down" for about 5 seconds. (Until the regular menu OSD disappears)

>Use a slight delay between pushing "Menu" and "Down" keys.

## Color Control (Do not modify these settings)

> Adjust the values SUB Brightness/Contrast/Red/Green/Blue.

(0~255)

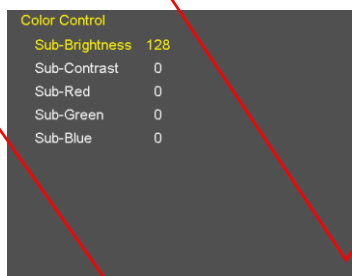

## Reset (DO NOT RESET THESE)

### ● Reset Factory Default

- All setting values are initialized.

(Except Operating Time/Calibration Data)

### ● Reset Operating Time

- Operating Time reset.

### ● Reset Calibration Data

- Calibration Data reset.

Factory RESET!

Press Enter To Reset Factory Default

Press Enter To Reset Operating Time

Press Enter To Reset Calibration Data

## 4kc FW Download / Upgrade

-Use to upgrade the firmware using a **FAT-32** formatted USB memory stick.

**-Do not turn off the monitor while a Download is in process.**

### ● FW Download

>Insert the USB memory stick containing ONLY the file "Thetis733.bin" into the USB port.

>Select the "**FW** Download" menu to start the firmware upgrade

>Time required: about 10 **seconds**

### ● FPGA Download

>Insert the USB memory stick containing ONLY the file "Thetis.pof" into the USB port.

>Select the "**FPGA** Download" menu to start the FPGA upgrade


>Time required: About 8 to 10 **minutes**

### ● OSD Download


>Insert the USB memory stick containing ONLY the files "Boland\_OSD.dat" & "Boland\_Font.dat" into the USB port.

>Select the "**OSD** Download" menu to start the OSD upgrade

>Time required: About 5 to 6 **minutes**

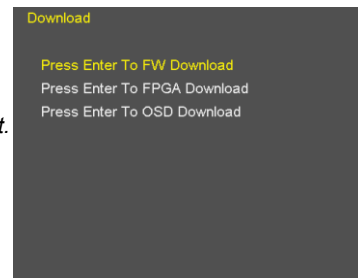

## Version

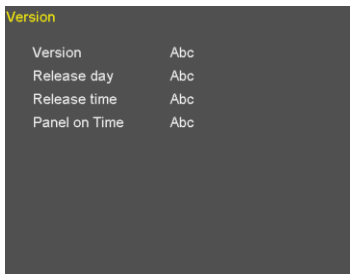

> Version / Release day / Release time / Panel on Time